

GUIDE TO GAMEPAD CONNECTION



GENERAL PREPARATION STEPS

- Charging: Ensure your gamepad is fully charged before connecting.
- Power on: Turn on the gamepad by holding the "**HOME**" button until the indicator lights up.

CONNECTING TO COSMO BOX FOR ARRIS 7300 DEVICE

- Go to "**Settings**" section on your device.
- Navigate to "**Remotes & Accessories**" > "**Add Device**".
- Put the gamepad into pairing mode by pressing "X + HOME" and hold until the indicator blinks.
- Find and select the device name **PG-9157/9238** in the menu on your screen.

CONNECTING TO SMARTPHONE (ANDROID/IOS) FOR ANDROID

- Turn on **Bluetooth** on your smartphone.
- Put the gamepad into pairing mode by pressing "**X + HOME**" and hold until the indicator blinks.
- Open the **Bluetooth** menu on your smartphone and find the device named **PG-9157/9238**.
- Select it for pairing and wait for the connection confirmation.

For iOS

- Turn on **Bluetooth** on your iOS device.
- Put the gamepad into pairing mode by pressing "**Y + HOME**" and hold until the indicator blinks.
- Open the **Bluetooth** menu on your smartphone and find the device named **PG-9157/9238**.
- Select it for pairing and wait for the connection confirmation.

CONNECTING TO PC (WINDOWS)

- Turn on **Bluetooth** on your PC (or connect a **Bluetooth adapter** if not built-in).
- Put the gamepad into pairing mode: **Button combination**: Hold "**B + HOME**" until the indicator blinks.
- On PC, open "**Settings**" > "**Devices**" > "**Bluetooth & other devices**".
- Click "**Add device**" and select "**Bluetooth**".
- Find your gamepad (**Wireless controller**) in the list and select it for pairing.

CONNECTING TO SMART TVS

- Turn on **Bluetooth** on TV (if TV supports Bluetooth gamepads).
- Put the gamepad into pairing mode by pressing "**X + HOME**" and hold until the indicator blinks.
- Find and select **PG-9157/9238** in your TV's Bluetooth menu.

CONTROL MODES

- **Reset settings: Button combination**: Press and hold "**Mode + Start**" buttons simultaneously until the indicator starts blinking.
- **Control panel**. Press and hold the "**Start**" button.
- **Sleep mode/power off/charging the gamepad**:
 1. Gamepad automatically enters sleep mode if not used for 5 minutes
 2. Press "**HOME**" button to wake the device from sleep mode

3. Press and hold "**HOME**" button for 3 seconds to turn off the device (all light indicators should turn off)
4. When the device is low on battery, the charge indicator will **blink rapidly**. Connect the gamepad to a power source; during charging the indicator will **blink slowly**. When fully charged, the indicator will **remain steady**.

Note: This instruction provides recommendations for the **IPEGA** gamepad model, available for purchase at Team sales and service centers. If you are using a different device, please refer to the instructions for your specific model. **Basic settings and control principles are often similar across most gamepads, allowing the use of general instructions for most models.**